

FLYWHEEL

BLUETOOTH HEADPHONES



TABLE OF CONTENTS

Care and Maintenance	3
Battery Care	3
Specs	3
Overview	4
Powering On/Off	5
Lights	6
Charging	7
Pairing	8
FLY Anywhere Display	8
iOS	8
Fit	9
Controls	10
Placing a call	11
Playing music / Three-way calling	12
Contact	13

CARE AND MAINTENANCE

Read the following recommendations carefully before using headphones.

- Store in dry place
- Keep headphones away from direct sunlight or heat, as high temperatures could shorten the life of device, destroy the battery, or distort plastic parts
- Do not expose headphones to extreme cold conditions
- Do not attempt to disassemble headphones
- Do not allow for headphones to fall on hard surfaces
- Do not use intensive chemical products or detergent to clean headphones
- Do not scratch the surface of headphones with sharp objects

BATTERY CARE

 
- Battery is recyclable.
- Batteries (battery pack or batteries installed) should not be exposed to excessive heat

SPECS

Bluetooth Version	4.1
Bluetooth Profiles	HFP, HSP, A2DP, AVRCP
Operating Distance	10 meters
Music Time	Up to 7 hours
Talk Time	Up to 7.5 hours
Standby Time	250 hours
Headphone Charging Time	2 hours
Charging Input	DC 5.0V/500mA
Weight	14.5g

OVERVIEW


- 1. Adjustable stabilizer
- 2. Microphone
- 3. Volume up ▲
- 4. Volume down ▼
- 5. Multi-function button ●
- 6. Indicator light
- 7. Charging jack
- 8. Clip
- 9. Ear tips
- 10. Micro USB charging cable

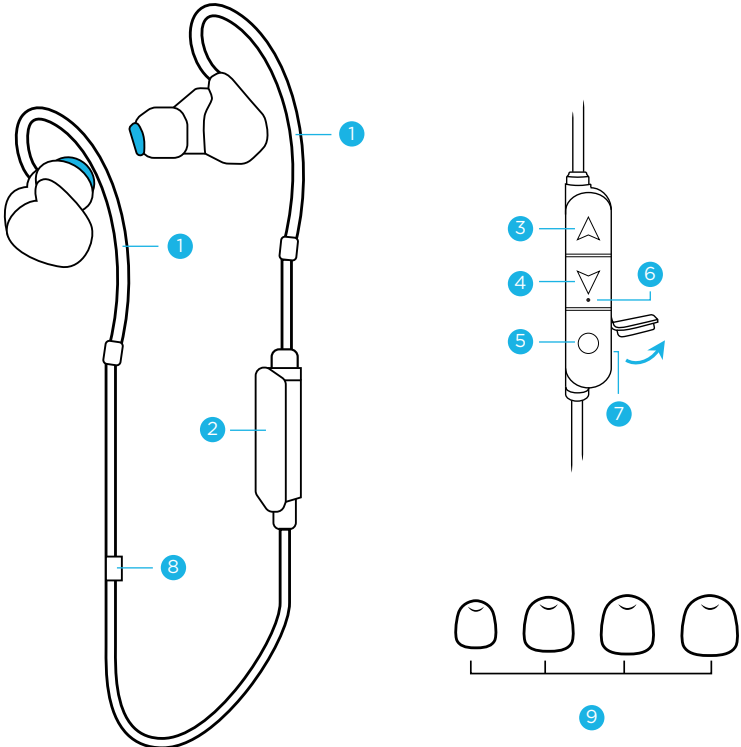

POWERING ON/OFF

Press and hold the ● button for 3 seconds until the blue light flashes.	Power on
Press and hold the ● button for 3 seconds until the red light flashes, then turns off.	Power off

 Note: If the headphones are not connected to a device for longer than 5 minutes, they will automatically turn off to preserve battery life.



LIGHTS


NORMAL OPERATION

Flashing red and blue	Pairing mode
Flashing blue once every 2 seconds	Not connected to a device (e.g. out of range)
Flashing blue twice every 4 seconds	Connected to device
Flashing red light	Low battery

CHARGING

Solid red light	Charging
No light	Charging complete

 Note: If the red light doesn't turn on when the power cable is plugged in to the headphones, make sure the USB end is connected to an active power source.

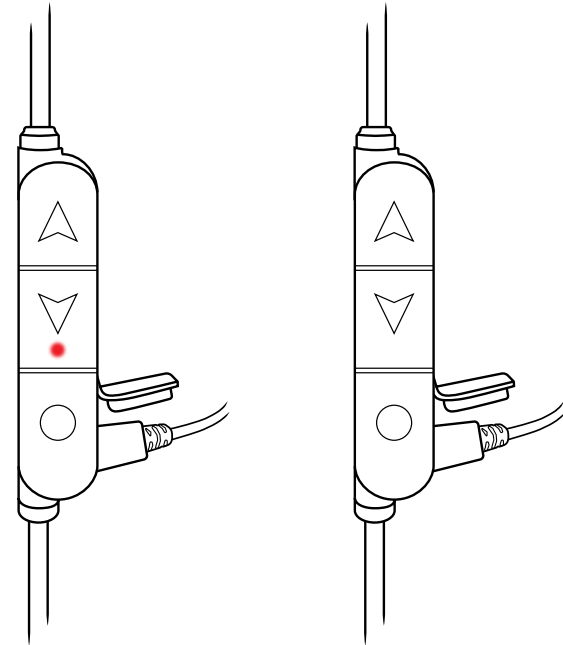

CHARGING

 

- Open the charging door (1)
- Plug the Micro USB end of the power cable into the charging port (2)
- Plug the USB end into a computer or FLY Anywhere bike

Note:

You may need to charge your headphones before using them for the first time. A full charge can take up to 2 hours.

PAIRING WITH IOS DEVICE

When the headphones are paired with an iOS device, the battery level will appear in the top right corner of the screen.

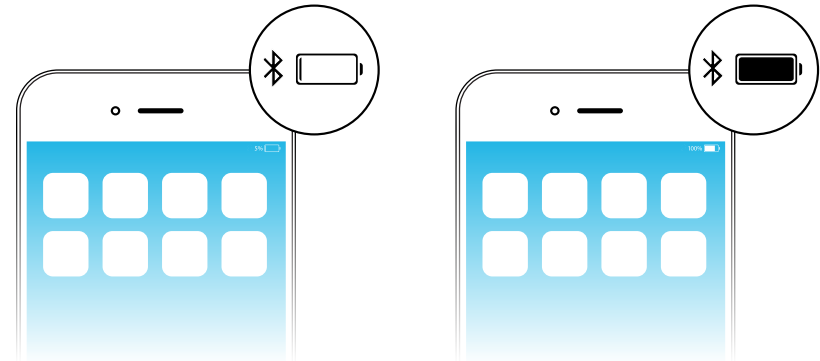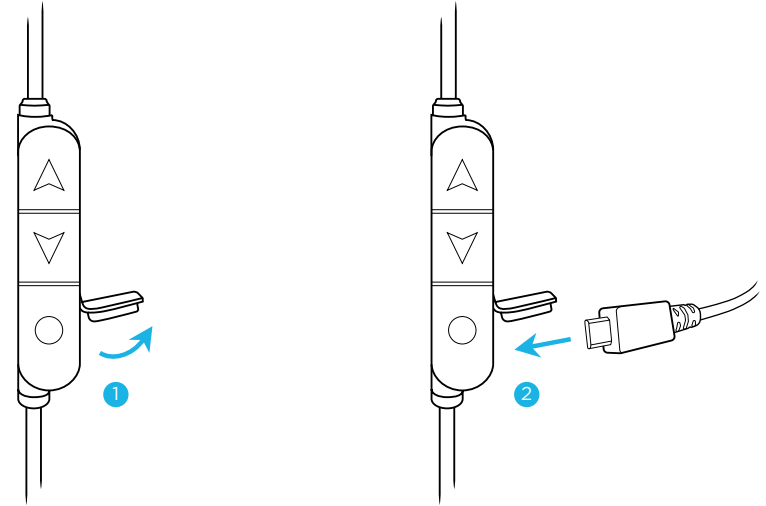

PAIRING

Before using your wireless headphones for the first time with a new device, you'll need to pair them via Bluetooth.

Once pairing is successful, the blue light will flash twice every 4 seconds for the duration of active use until the headphones are turned off or the battery is low.

ENTER PAIRING MODE

Make sure your headphones are turned off and within 3 feet of your device, then hold the ● button for 5 seconds until the blue and red lights flash.

Note: To pair your headphones with any additional devices, repeat the steps to enter pairing mode before selecting them in your additional device's Bluetooth settings.

FLY ANYWHERE DISPLAY

To finish pairing with the FLY Anywhere display:

- Tap ●●●
- Tap Settings
- Tap Network
- Tap Audio
- Tap Flywheel Headphones

IOS

To finish pairing with your iOS device:

- Open the Settings app on your iOS device
- Tap Bluetooth
- Make sure Bluetooth is enabled
- Tap Flywheel Headphones

HEADPHONE FIT

SIZE

Select the ear tip size (1) that most comfortably secures the headphones within your ear during movement.


ADJUSTMENT

With the cable wrapped behind your neck, adjust the flexible stabilizers (2) to your preferred fit.

Warning: Do not sharply fold the stabilizers (3). Folding the stabilizers can damage your headphones.


CABLE CLIP

To get the best fit around your head and neck, snap the cable into the clip, then slide the cable to adjust.

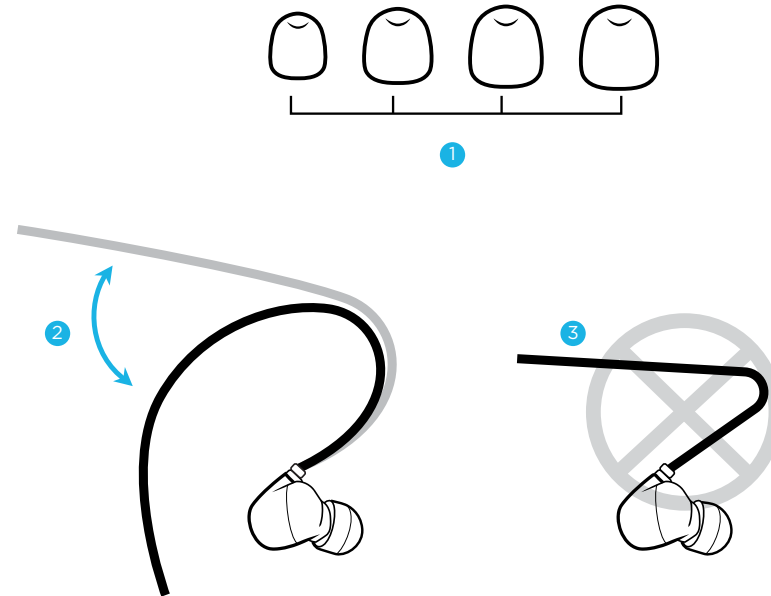

FLY ANYWHERE CONTROLS

 Connect your headphones to the FLY Anywhere built-in display to control instructor and music volume during your ride. (1)

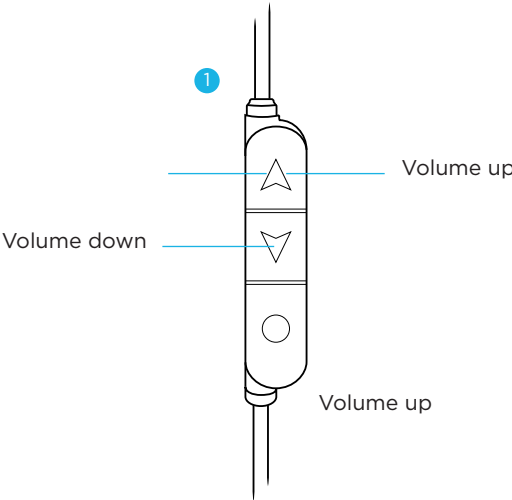

MOBILE DEVICE CONTROLS

MOBILE DEVICE CONTROLS

If you're using the Flywheel Sports app (iOS), you can control in-class volume, or use them as a standalone Bluetooth headset to control music or make phone calls.

PHONE (1)

- Volume up ▲
- Answer/End (short)/Redial last number (double-click) ●
- Volume down ▼

MUSIC (2)

- Volume up (short press)/next song (long press) ▲
- Pause/play ●
- Volume down (short press)/previous song (long press) ▼

CONTROLS

Connect your headphones to the FLY Anywhere built-in display to control instructor and music volume during your ride.

MOBILE DEVICE CONTROLS

 
If you're using the Flywheel Sports app (iOS), you can control in-class volume, or use them as a standalone Bluetooth headset to control music or make phone calls.

PHONE (1)

- Volume up ▲
- Answer/End (short)/Redial last number (double-click) ●
- Volume down ▼

MUSIC (2)

- Volume up (short press)/next song (long press) ▲
- Pause/play ●
- Volume down (short press)/previous song (long press) ▼

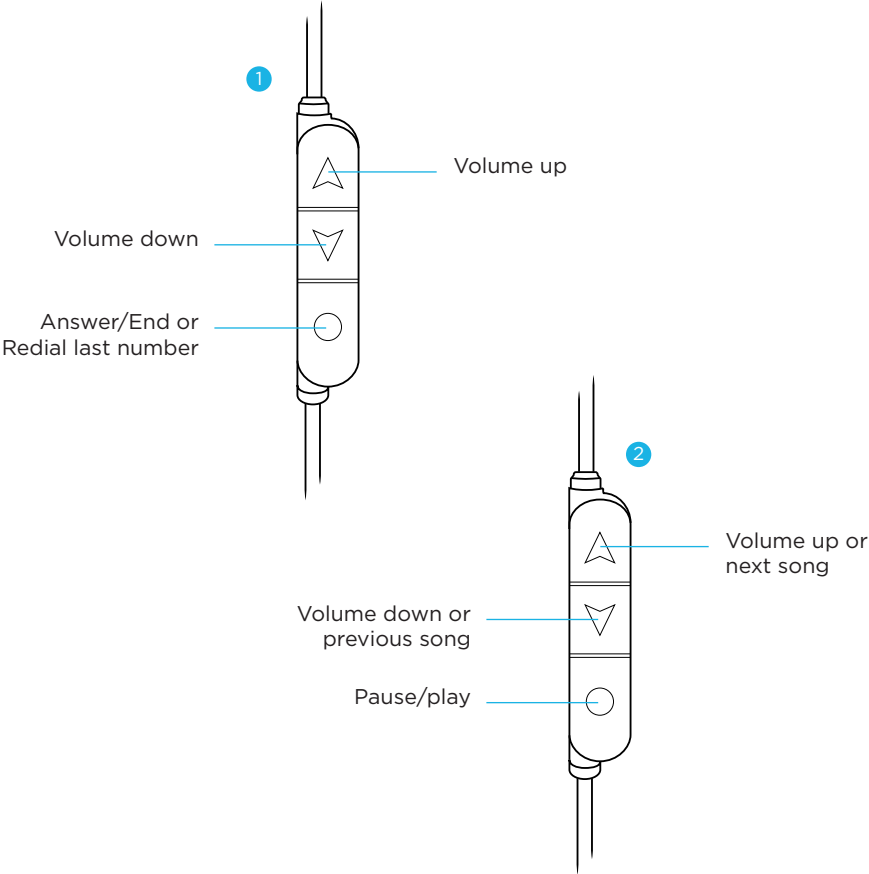

MOBILE DEVICE CONTROLS (CONT'D)

PLACING A CALL WITH HEADPHONES

FUNCTIONS	CALL STATUS	OPERATION	TONE
Cancel a call	Calling	Short press ● once	Call terminated
Answer a call	Incoming call	Short press ● once	Answer
Reject a call	Incoming call	Long press ● for 2 sec.	Reject
End a call	During call	Short press ● once	Call terminated
Volume up	During call	Short press ▲	No prompt tone
Volume down	During call	Short press ▼	No prompt tone
Transfer call to phone	During call	Long press ● for 2 sec.	Transfer audio
Transfer call to headphones	During call	Long press ● for 2 sec.	Transfer audio
Microphone mute	During call	Long press ▲ for 2 sec.	Mute on
Cancel mute	During call	Long press ▲ for 2 sec.	Mute off
Redial last number	Standby mode	Double-click ●	Redial last number
Voice dial	Standby mode	Short press ● and ▲ simultaneously	Voice dial

MOBILE DEVICE CONTROLS (CONT'D)

PLAYING MUSIC

FUNCTIONS	STATUS OF HEADPHONES	OPERATION
Volume up	Playing music	Short press ▲
Volume down	Playing music	Short press ▼
Previous song	Playing music	Long press ▲
Next song	Playing music	Long press ▼
Pause	Playing music	Short press ●
Play	Pausing	Short press ●

THREE-WAY CALLING

FUNCTIONS	STATUS OF HEADPHONES	OPERATION
Answer new call, End current call	Second incoming call	Short press ●
Answer new call, retain current call	Second incoming call	Double-click ●
Switch calls	During call	Double-click ●
End current call, switch to on-hold call	During call	Short press ●

FLYWHEEL

FLYWHEELSPORTS.COM

CONTACT

Web: www.flywheelsports.com

Email: help@flywheelsports.com

Phone: (888) 589-8431

©2017 Flywheel Sports, Inc.